



FULL CONTROL  
BOARD MANUAL

 
 
 
 
# KUSTOS BT B 25 KUSTOS BT B 40




D814422.0ADAO\_02 29-05-24




**BT B 25** Cu MAX 295mm  
**BT B 40** Cu MAX 355mm

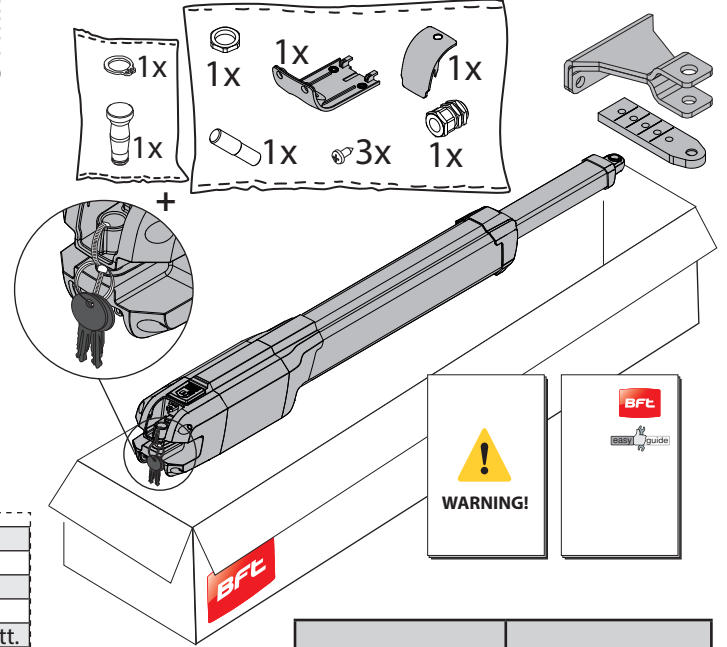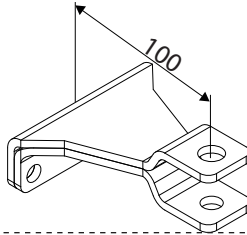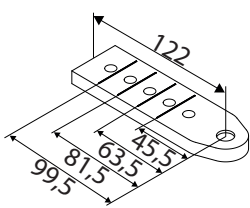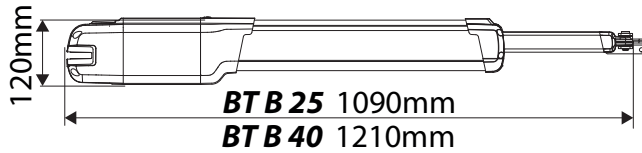

IT	Verifica la tua composizione nell'etichetta imballo.
EN	Check your composition on the packaging label
FR	Vérifiez votre composition sur l'étiquette d'emballage.
ES	Controla la composición de tu kit en la etiqueta del embalaje
DE	Überprüfen Sie Ihre Zusammenstellung auf dem Verpackungsetikett.
NL	Controleer uw samenstelling op het verpakingslabel.
PT	Verifique a composição no rótulo da embalagem
EL	Ελέγξτε τη σύνθεση του κιτ στην ετικέτα της συσκευασίας
PL	Prosimy sprawdzić zawartość zestawu na etykietcie opakowania"
RU	Проверьте комплектацию на этикетке упаковки.
CS	Zkontrolujte složení sady na štítku obalu.
TR	Ambalaj etiketindeki bileşiminizi kontrol edin
HR	Na etiketi provjerite sastav svojeg paketa
RO	Verificați-vă compoziția de pe eticheta ambalajului
	تحقق من التركيبة لي ماصق العبوة
AR	

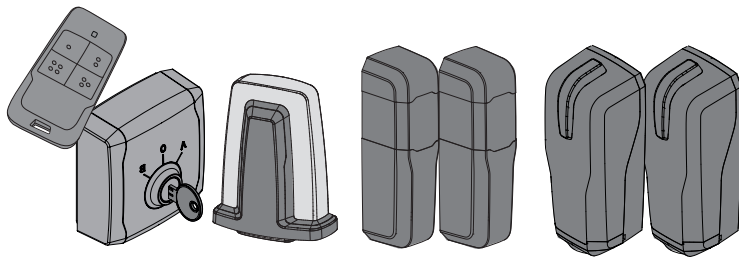 

Example





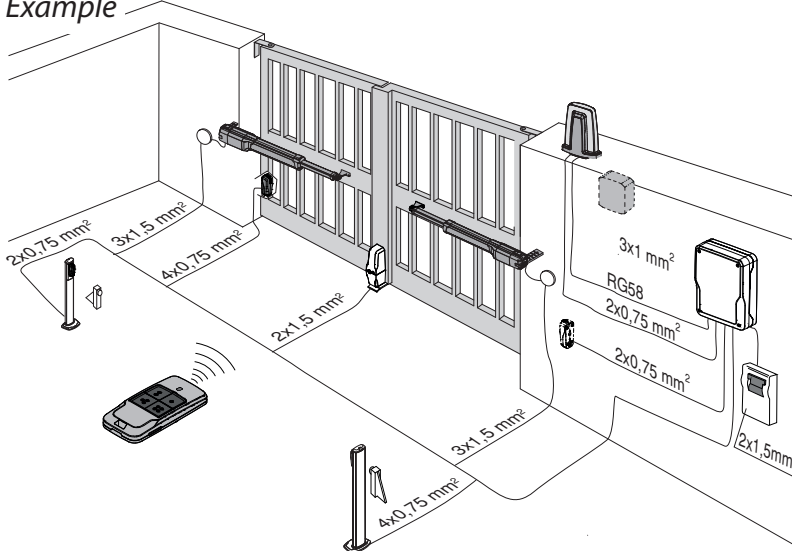 


	KUSTOS BT B 25	KUSTOS BT B 40
24 V		<b>40W</b>
<b>IP</b>		<b>44</b>
		<b>-20°C / +55°C</b>
<b>cycles/h</b>		<b>30</b>
		<b>&lt;70 dBA</b>
<b>Speed max</b>		<b>20mm/s</b>
Force 2.000 N (~200 kg)		Page 16
90°	<b>~ 12 s *</b>	<b>~ 16 s *</b>

\*

IT: Tempo indicativo misurato senza rallentamenti (anta massima e peso massimo).  
EN: Indicative time measured without slowdowns (maximum door and maximum weight).  
FR: Temps indicatif mesuré sans ralentissements (vantaill maximum et poids maximum).  
DE: Gemessene Richtzeit ohne Abbremsen (maximaler Flügel und maximales Gewicht).  
ES: Tiempo orientativo medido sin ralentizaciones (puerta máxima y peso máximo).  
NL: Indicatieve tijd gemeten zonder vertragingen (maximale vleugel en maximaal gewicht).  
PT: Tempo indicativo medido sem desacelerações (porta máxima e peso máximo).  
GR: Ενδεικτικός χρόνος μετρημένος χωρίς επιβραδύνσεις (μέγιστο φύλλο και μέγιστο βάρος).  
PL: Orientacyjny czas mierzony bez spowolnień (maksymalne skrzydło i maksymalna waga).  
RU: Ориентировочное время, измеренное без замедлений (максимальная створка и максимальный вес).  
CZ: Orientační čas měřený bez zpomalení (maximální křídlo a maximální hmotnost).  
TR: Yavaşlama olmadan ölçülen gösterge süresi (maksimum kanat ve maksimum ağırlık).  
HR: Indikativno vrijeme izmjereno bez usporavanja (maksimalni list i maksimalna težina).  
RO: Timp orientativ măsurat fără încetiniri (frunză maximă și greutate maximă).

     تم قياس الوقت الاسترشادي بدون تباطؤ (الحد الأقصى للباب والوزن الأقصى)

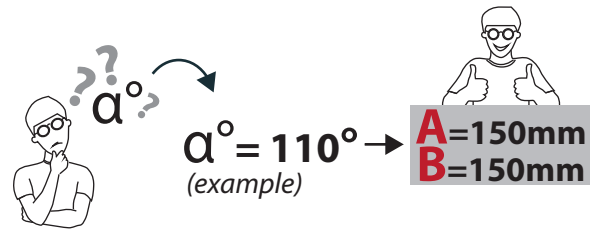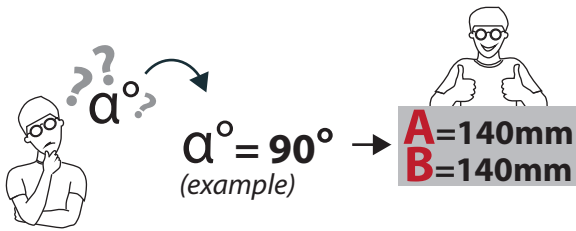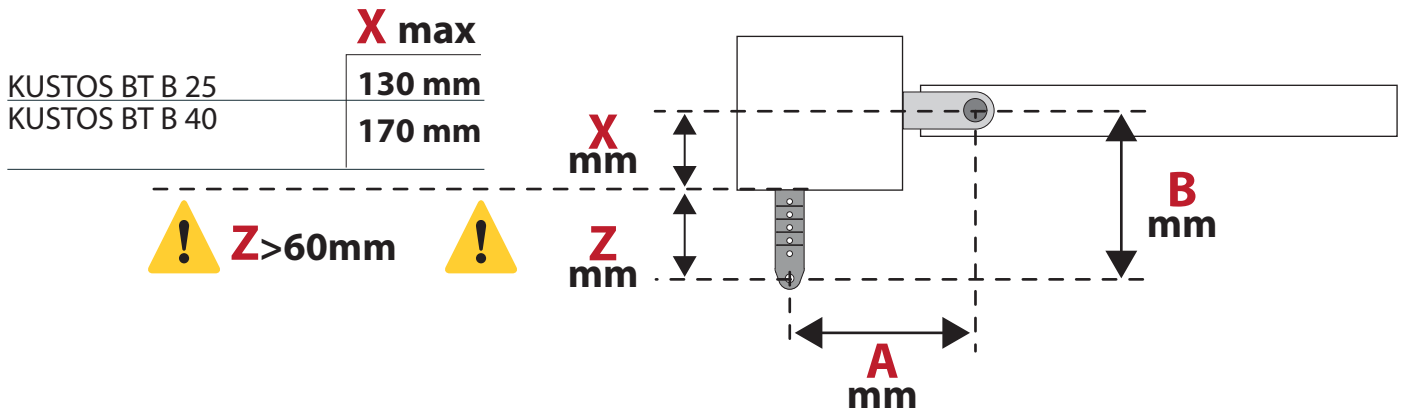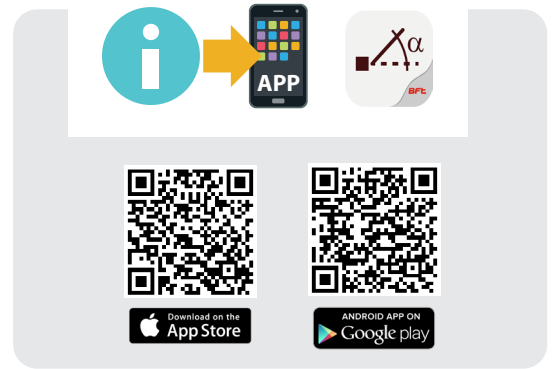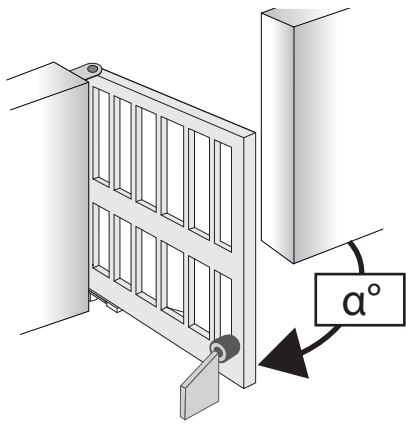

**KUSTOS BT B 25**



**KUSTOS BT B 40**

 
 
		<b>A mm</b>											
		100	110	120	130	140	150	160	170	180	190		
<b>B mm</b>	100	103°	108°	112°	116°	119°	110°	104°	99°	96°	93°		
	110	102°	106°	110°	114°	111°	105°	99°	96°	92°			
	120	101°	105°	109°	112°	106°	100°	96°	92°				
	130	100°	104°	108°	109°	101°	96°	92°					
	140	99°	103°	106°	102°	96°	92°						
	150	99°	103°	102°	96°	92°							
	160	99°	102°	96°	93°								
	170	98°	98°	91°									
	180	91°	92°										
	190	91°											
	200												
210													

$\alpha^\circ$






		<b>A mm</b>														
		100	110	120	130	140	150	160	170	180	190	200	210	220		
<b>B mm</b>	100	103°	108°	112°	115°	118°	121°	124°	122°	114°	109°	104°	101°	98°		
	110	102°	106°	110°	113°	117°	120°	123°	116°	110°	105°	101°	98°	95°		
	120	101°	105°	109°	112°	115°	118°	121°	112°	106°	102°	98°	95°			
	130	101°	104°	108°	111°	114°	117°	114°	107°	102°	98°	95°				
	140	100°	103°	107°	110°	113°	116°	108°	103°	99°	95°					
	150	99°	102°	106°	109°	112°	114°	104°	99°	95°						
	160	98°	102°	105°	108°	110°	105°	99°	95°							
	170	98°	101°	104°	107°	107°	100°	95°								
	180	98°	101°	103°	106°	100°	95°									
	190	97°	100°	102°	105°	95°										
	200	97°	100°	101°	95°											
	210	96°	99°	97°												
	220	96°														

$\alpha^\circ$



2

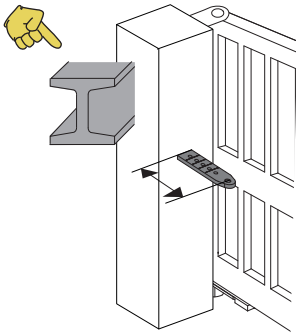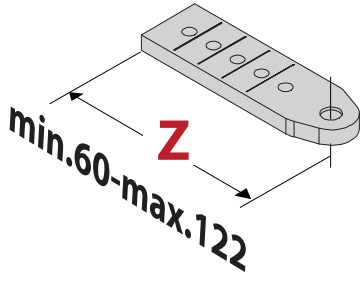


**Z < 122mm**

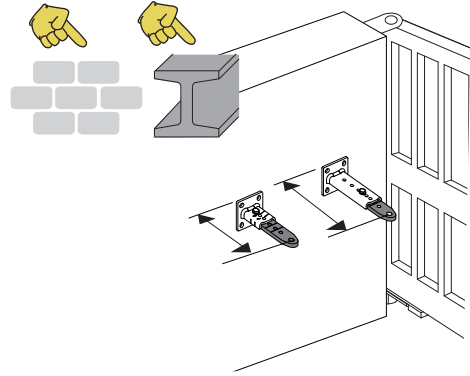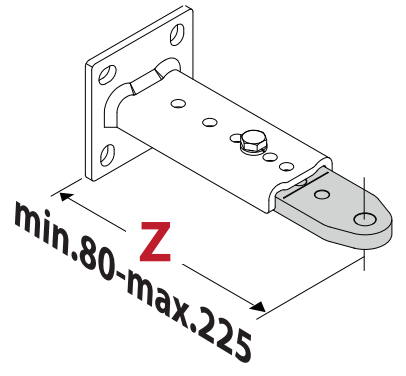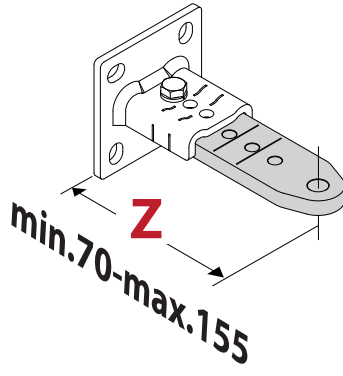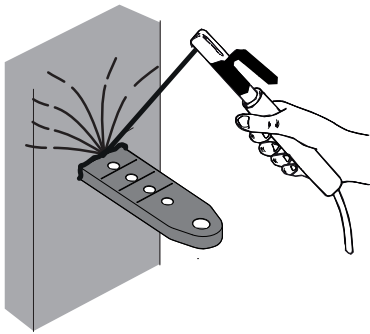     


**BUY**

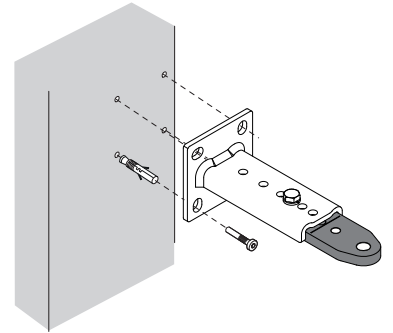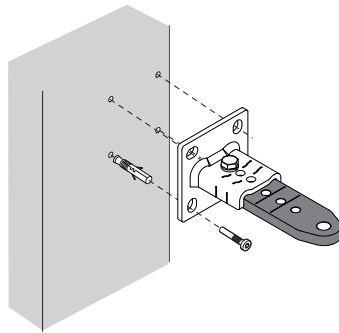  




3

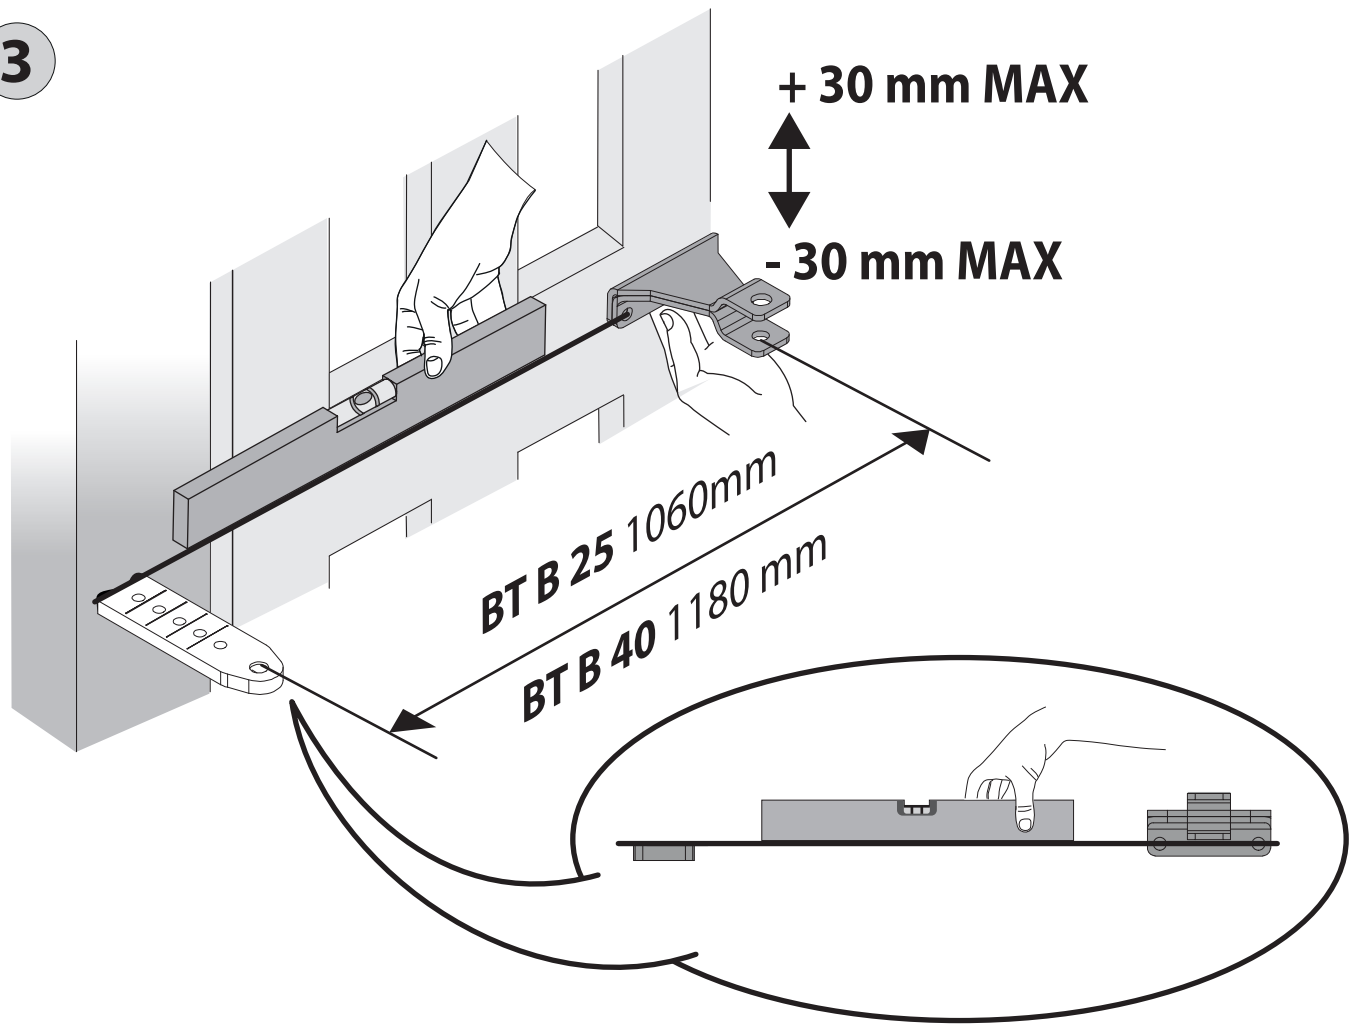 


4

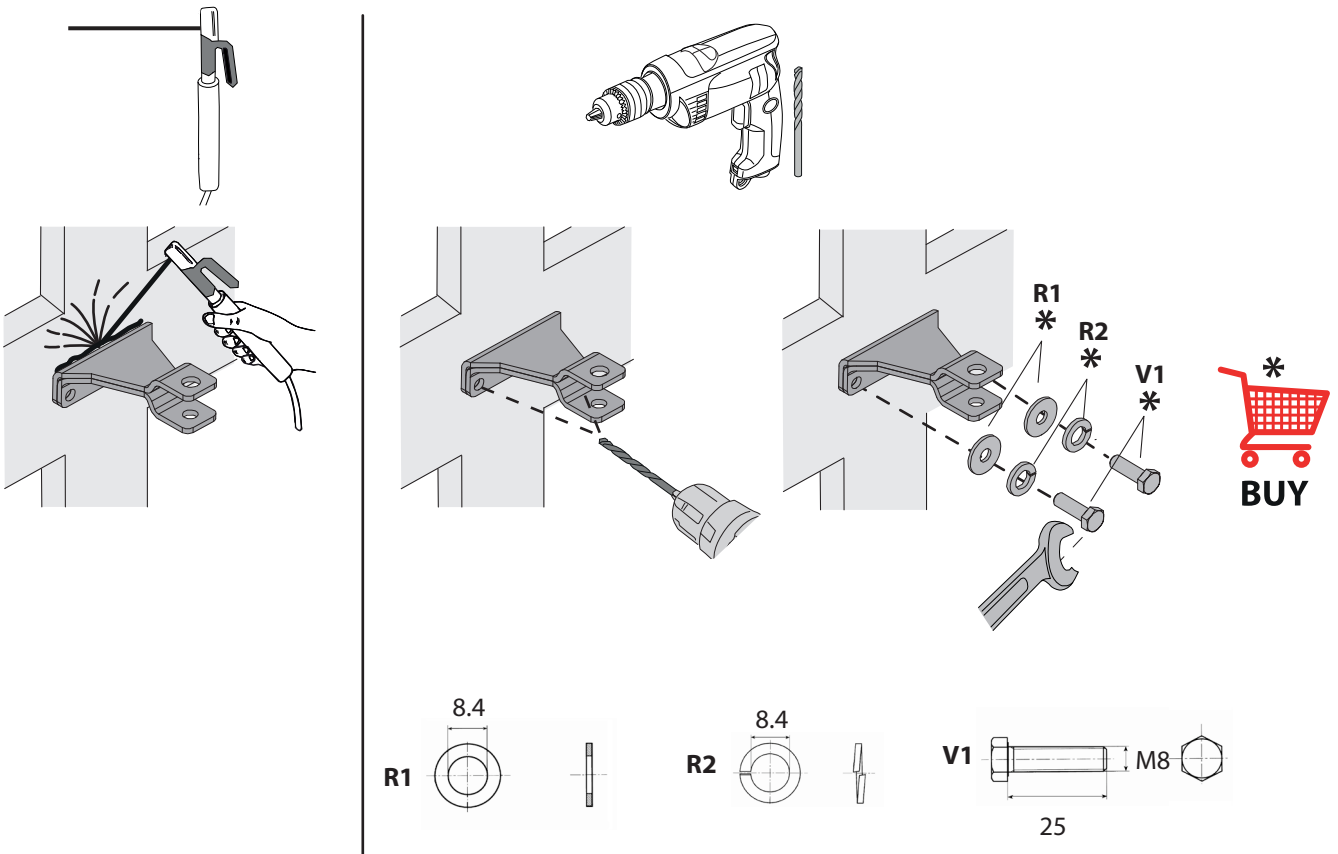 


5

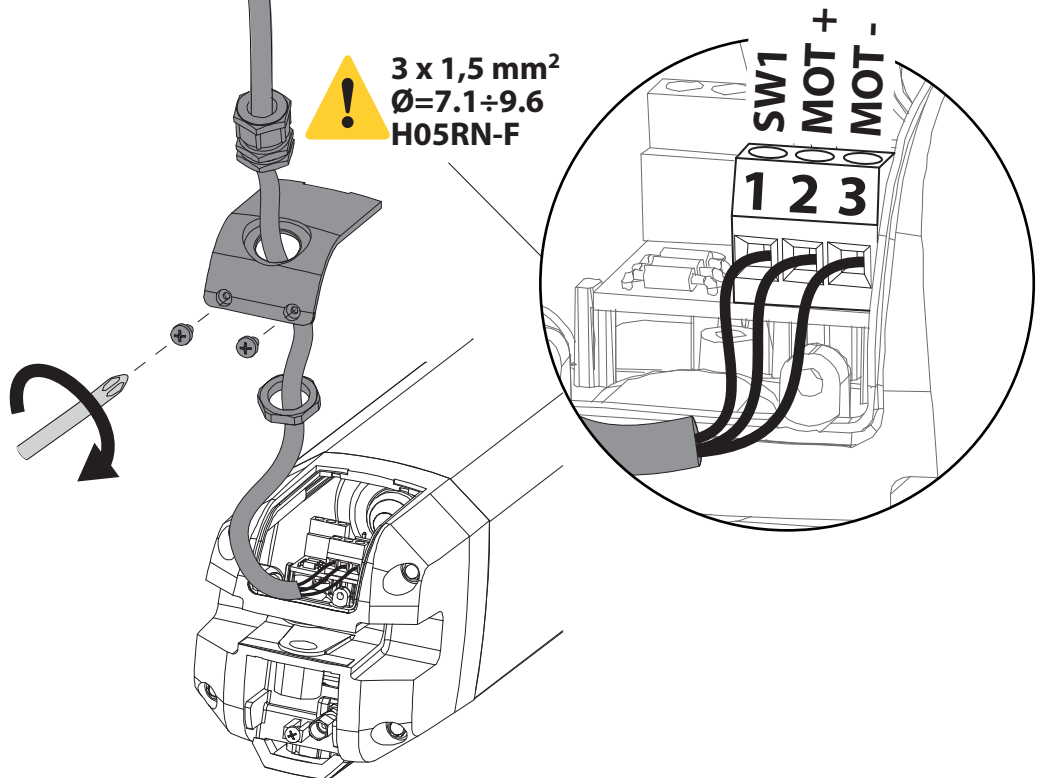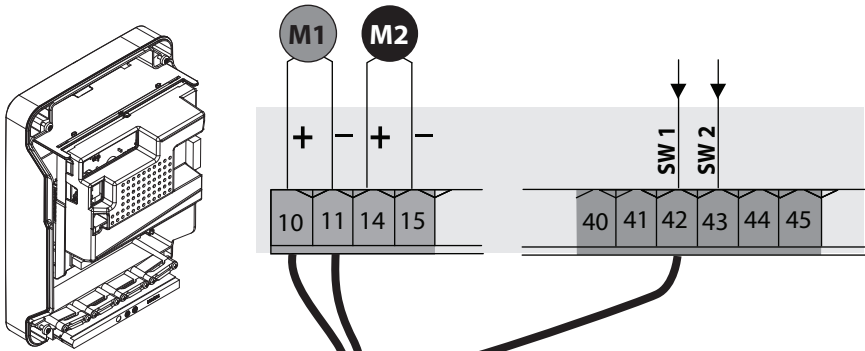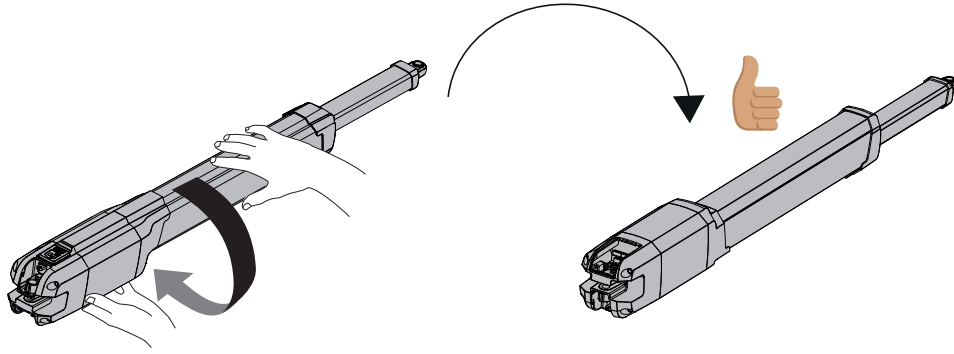   

6

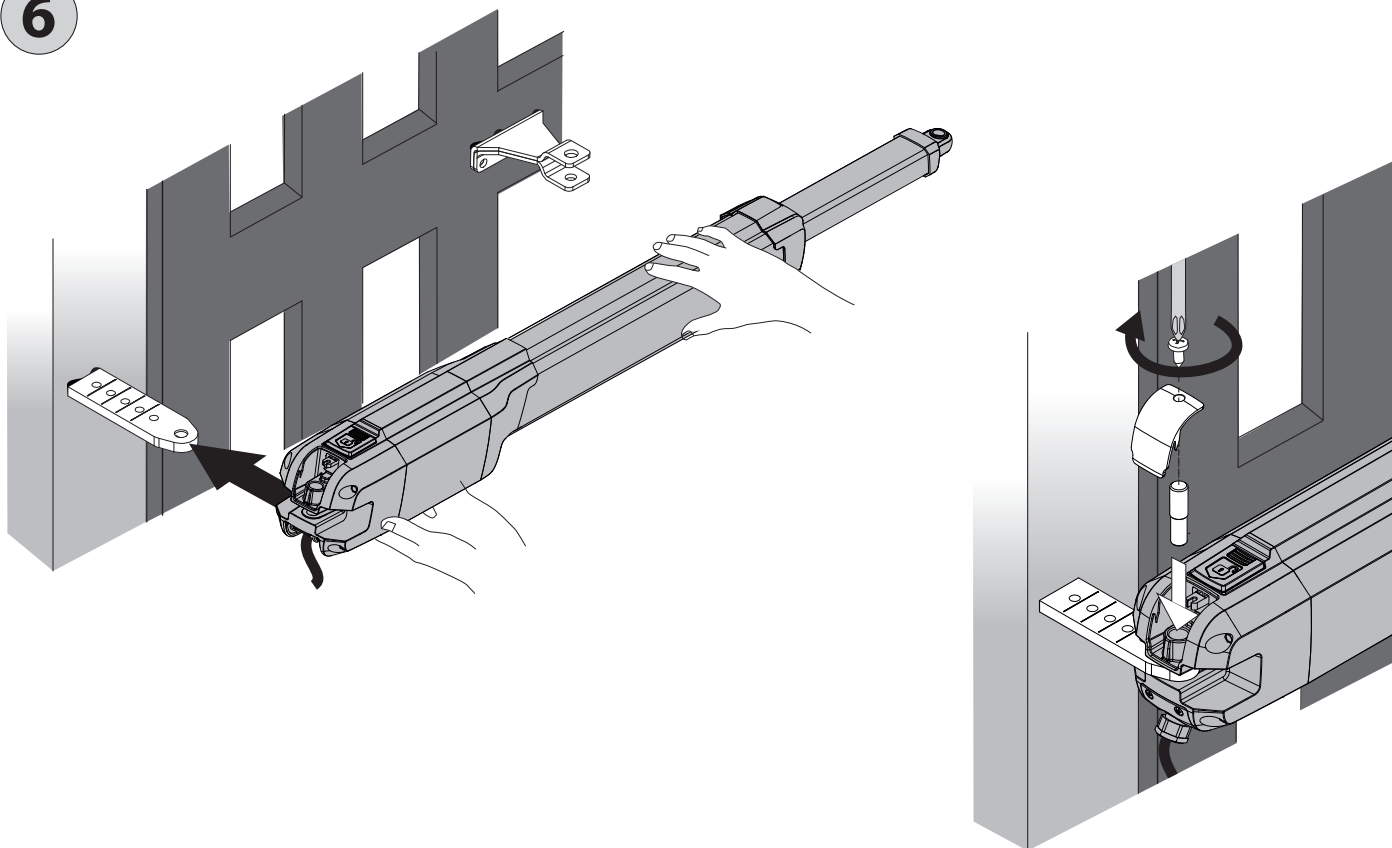 

7

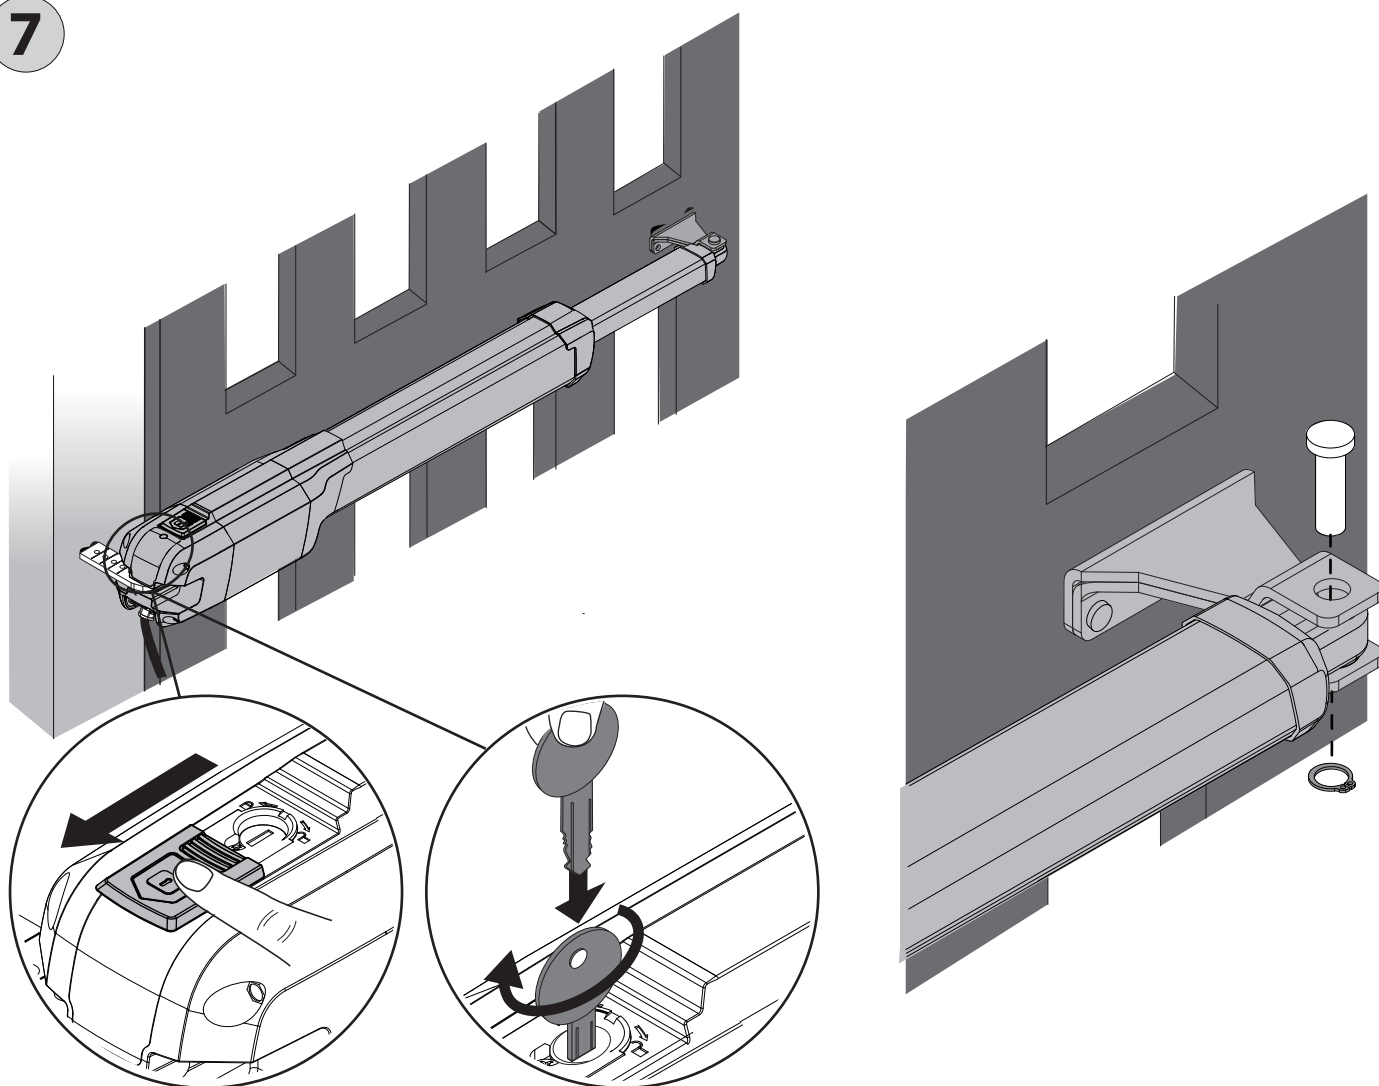 

# FINAL USER

## NO POWER

 
 
 
 
 
 
 
بدون طاقة

IT	MANOVRA MANUALE
EN	MANUAL OPENING
FR	OUVERTURE MANUELLE
ES	APERTURA MANUAL

DE	MANUELLE ÖFFNUNG
NL	HANDMATIGE OPENING
PT	ABERTURA MANUAL
EL	ΧΕΙΡΟΚΙΝΗΤΟ ΑΝΟΙΓΜΑ

PL	OTWIERANIE RĘCZNE
RU	РУЧНОЕ ОТКРЫТИЕ
CS	MANUÁLNÍ OTEVÍRÁNÍ
TR	MANUEL AÇMA

HR	RUČNO OTVARANJE
RO	DESCHIDERE MANUALĂ
فتح يدوي	AR

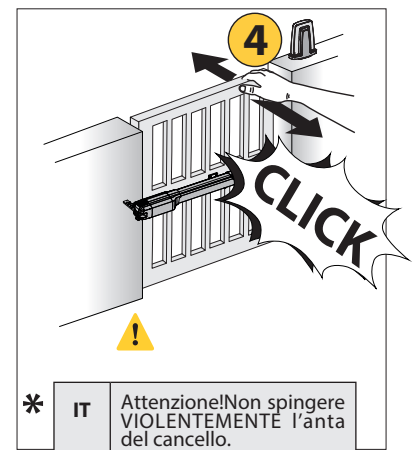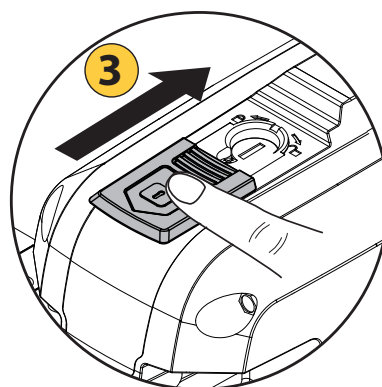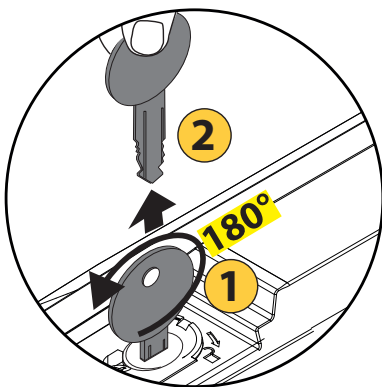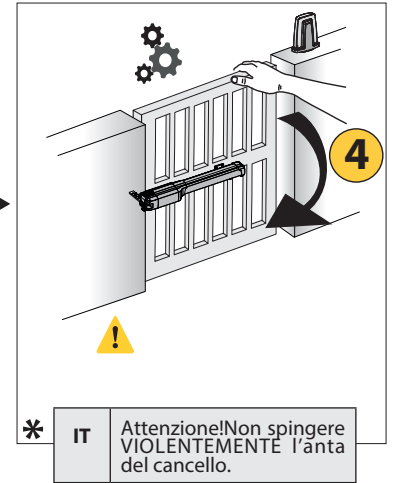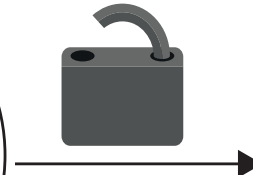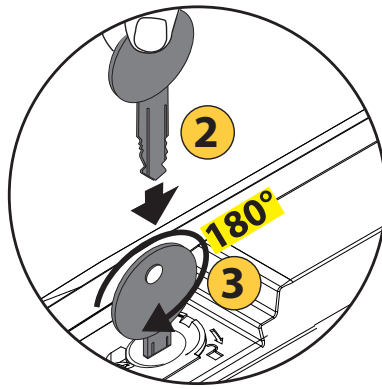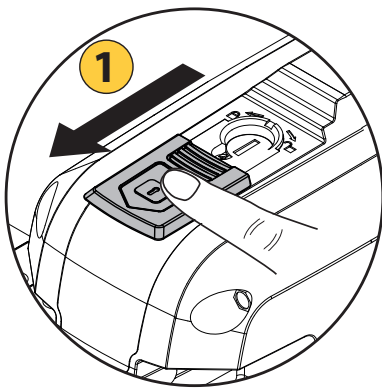


IT	Attenzione! Non spingere VIOLENTEMENTE l'anta del cancello.
EN	Warning! Do not push the gate WITH EXCESSIVE FORCE
FR	Attention! Ne poussez pas VIOLEMMENT le vantail du portail.
ES	¡Atención! No empuje CON VIOLENCIA la hoja de la puerta.
DE	Achtung! Schieben Sie den Torflügel nicht MIT GEWALT an.

NL	Let op! Duw niet MET GEWELD tegen de deur van het hek.
PT	Atenção! Não empurrar COM FORÇA a folha do portão.
EL	Προσοχή! Μην στρώχνετε ΜΕ ΜΕΓΑΛΗ ΔΥΝΑΜΗ το φύλλο της πύλης.
PL	Uwaga! Nie należy GWAŁTOWNIE popychać skrzydła bramy.
RU	Внимание! Не толкайте СЛИШКОМ СИЛЬНО створку ворот.

CS	Pozor! Na křídlo brány netlačte PŘÍLIŠNOU SILOU.
TR	Dikkat! Kapının kanadını ŞİDDETLİ bir şekilde itmeyin.
HR	Nemojte gurati vrata uz primjenu PREKOMJERNE SILE!
RO	Nu împingeți bariera CU FORȚĂ EXCESIVĂ.
AR	لا تدفع البوابة بقوة زائدة

8

 **MENÙ SEMPLIFICATO - SIMPLIFIED MENU - MENU SIMPLIFIÉ -  
VEREINFACHTES MENÜ - MENÙ SEMPLIFICADO - VEREENVOUDIGD MENU -  
MENU PROGRAMAÇÃO INSTALAÇÃO - ΜΕΝΟΥ ΡΥΘΜΙΣΗΣ ΕΓΚΑΤΑΣΤΑΣΗΣ -  
MENU USTAWIEŃ INSTALACJI - МЕНЮ УСТАНОВКИ ОБОРУДОВАНИЯ - MENU PRO NASTAVENÍ  
ZAŘÍZENÍ - TESİSİ AYARLAMA MENÜSÜ -  
POJEDNOSTAVLJENI IZBORNIK - ZJEDNODUŠENÉ MENU - القائمة المبسطة**

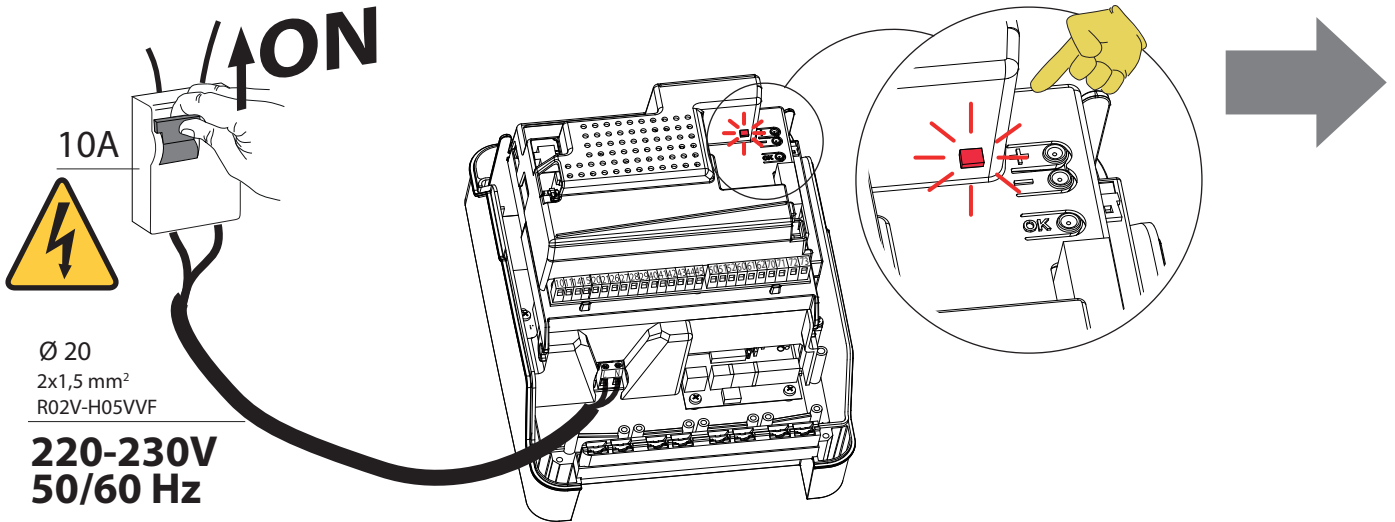

**LEGENDA - LEGENDE - LEGEND - LEYENDA - ΥΠΟΜΝΗΜΑ - LEGANDA - ΛΕΖΑΝΤΑ -  
УСЛОВНЫЕ ОБОЗНАЧЕНИЯ - VYSVĚTLIVKY - ANLAMLAR - LEGENDÄ أسطورة**

C

IT	Cancello chiuso
EN	Gate closed
FR	portail fermé
ES	puerta cerrada
DE	Tor geschlossen
NL	hek gesloten
PT	portão fechado
EL	πύλη κλειστή
PL	brama zamknięta
RU	закрытые ворота
CS	brána zavřena
TR	kapı kapalı
HR	Vrata zatvorena
RO	Barieră închisă
	البوابة مغلقة   AR

P-C

IT	Salvataggio in corso
EN	Saving
FR	sauvegarde en cours
ES	copia de seguridad en curso
DE	Backup läuft
NL	back-up wordt uitgevoerd
PT	backup em curso
EL	δημιουργία αντιγράφων ασφαλείας σε εξέλιξη
PL	wykonywanie kopii zapasowej w toku
RU	выполняется резервное копирование
CS	probíhá zálohování
TR	yedekleme devam ediyor
HR	Špremanje
RO	Salvare
	حفظ   AR

O



IT	Cancello aperto
EN	Gate opened
FR	portail ouvert
ES	puerta abierta
DE	Tor offen
NL	hek geopend
PT	portão aberto
EL	πύλη ανοιχτή
PL	brama otwarta
RU	открытые ворота
CS	brána otevřena
TR	kapı açık
HR	Vrata otvorena
RO	Barieră deschisă
	البوابة مفتوحة   AR




IT	Azione da fare rapidamente
EN	To do quickly
FR	action à faire rapidement
ES	la acción se debe realizar rápidamente
DE	Maßnahme schnell durchzuführen
NL	moet snel worden uitgevoerd
PT	ação a executar rapidamente
EL	ενέργεια που πρέπει να γίνει γρήγορα
PL	działania, które należy podjąć szybko
RU	быстро выполняемая операция
CS	akce, která má být provedena rychle
TR	hızlı bir şekilde gerçekleştirilecek eylem
HR	Brzo učiniti
RO	A se efectua rapid
	للقيام بسرعة   AR



# Display in italiano

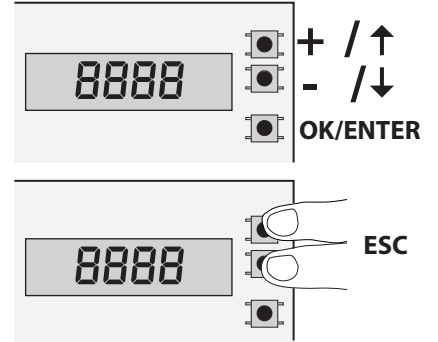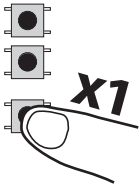  


(IT) Lingua - (PT) Língua

 


(IT) Tipo motore - (PT) Tipo de motor



 
(IT) Numero motori - (PT) Número de motores

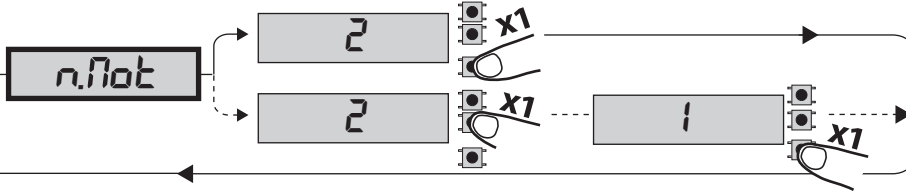

(IT) Direzione - (PT) Direção

 


 (IT) Personalizzazione - (PT) Personalização




(IT) Memorizzazione dei telecomandi  
(PT) Memorização dos comandos por rádio


 
IT Ripetere l'operazione se ci sono altri telecomandi  
PT Repetir a operação se houver outros comandos por rádio

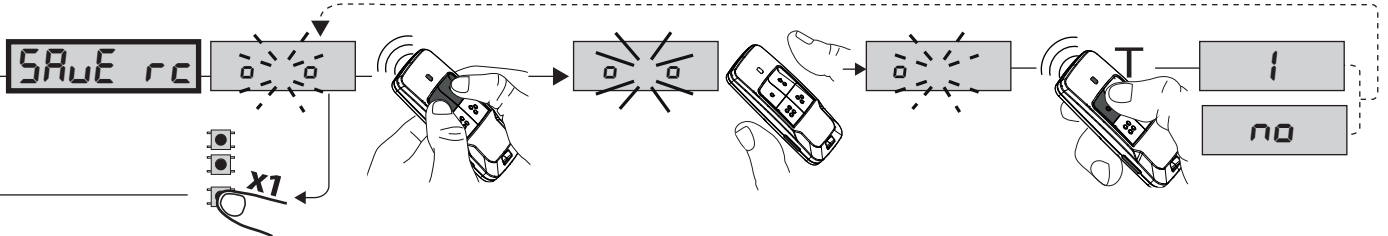


 
(IT) Regolazione finecorsa - (PT) Regulación de final de carrera

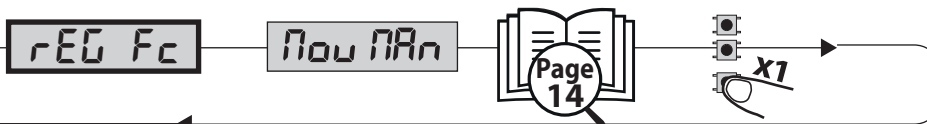

  
(IT) Regolazione automatico della forza - (PT) Regulação automática da força

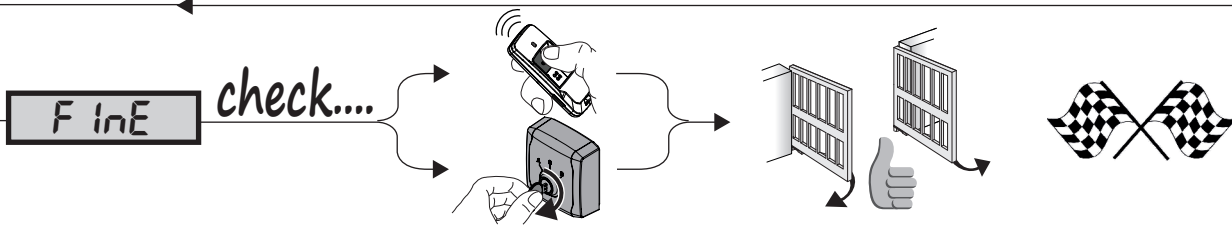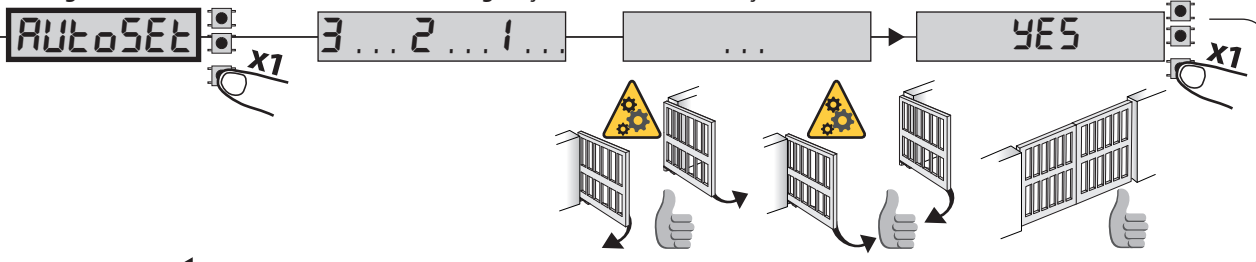

# Display in English

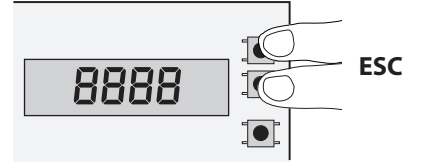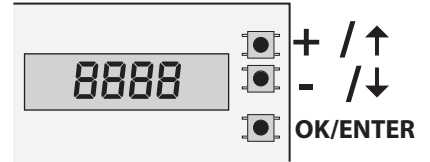  

 
(EN) Language - (NL) Taal - (EL) Γλώσσα - (PL) Język - (RU) Язык - (CS) Jazyk - (TR) Dil - (HR) Jezik - (RO) Limbă - اللغة (AR)




(EN) Type of motor - (NL) Soort motor - (EL) Τύπος μοτέρ - (PL) Typ silnika - (RU) Тип двигателя - (CS) Typ motoru - (TR) Motor tipi - (HR) Vrsta motora - (RO) Tip de motor - نوع الموتور (AR)



 
(EN) Number of motor - (NL) Aantal motoren - (EL) Αριθμός μοτέρ - (PL) Liczba silników - (RU) Количество двигателей - (CS) Počet motorů - (TR) Motor sayısı - (HR) Broj motora - (RO) Număr de motor - رقم الموتور (AR)

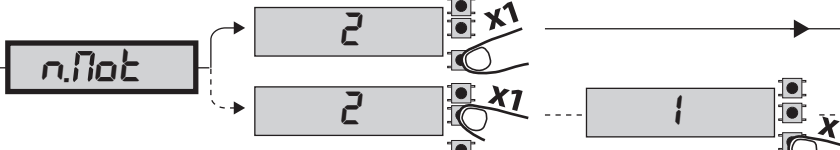

 (EN) Opening direction - (NL) Openingsrichting - (EL) Κατεύθυνση ανοίγματος - (PL) Kierunek otwierania - (RU) Направление открытия - (CS) Směr otevření - (TR) Açılma yönü - (HR) Smjer otvaranja - (RO) Direcție de deschidere - اتجاه الفتح (AR)




 (EN) Customisation - (NL) Aanpassing - (EL) Εξατομίκευση - (PL) Dostosowanie - (RU) Персонализация - (CS) Personalizace - (TR) Kişiselleştirme - (HR) Individualizacija - (RO) Personalizare - التخصيص (AR)



EN Repeat operation if there are other remote controls  
 NL Herhaal de handeling als er andere radiografische afstandsbedieningen zijn  
 EL Επαναλάβετε τη διαδικασία εάν υπάρχουν άλλα τηλεχειριστήρια  
 PL Powtórz operację, jeśli występują inne polecenia sterowania radiowego  
 RU Повторите операцию, если есть другие пульты радиоуправления  
 CS Pokud jsou k dispozici další dálkové ovladače, akci zopakujte  
 TR Eğer diğer radyo kumandalar varsa işlemi tekrarlayın  
 HR Ponovite postupak ako postoje drugi daljinski upravljači  
 RO Repetați operațiunea dacă există alte telecomenzi  
 (AR) كرر العملية إذا كانت هناك أجهزة تحكم عن بعد أخرى


 
(EN) Memorisation of remote controls  
 (NL) Opslaan van radiografische afstandsbediening  
 (EL) Αποθήκευση τηλεχειριστηρίων στη μνήμη  
 (PL) Zapamiętywanie poleceń sterowania radiowego  
 (RU) Сохранение пультов радиоуправления  
 (CS) Paměť dálkových ovladačů  
 (TR) Radyo kumandaların hafızaya alınması  
 (HR) Memoriziranje daljinskog upravljanja  
 (RO) Memorarea comenzii de la distanță  
 (AR) حفظ أجهزة التحكم عن بعد

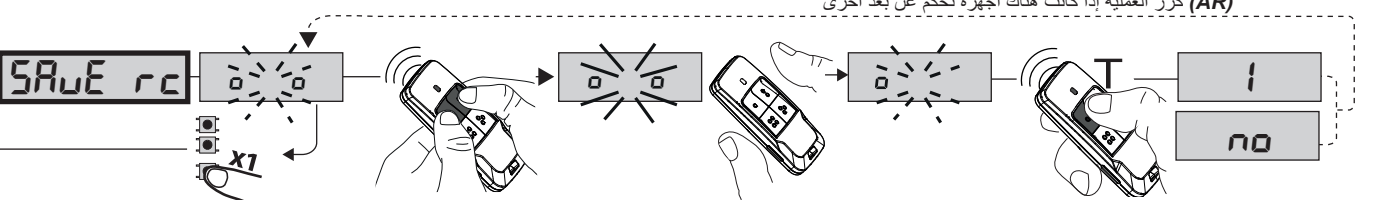




(EN) Limit switch adjustment - (NL) Afstelling eindschakelaar - (EL) Ρύθμιση τέλους διαδρομής  
 (PL) Regulacja wyłącznika krańcowego - (RU) Регулировка концевого - (CS) Nastavení dorazu - (TR) Sınır anahtarı ayarı - (HR) Podešavanje graničnog prekidača - (RO) Setarea comutatorului de limită - الحد من تعديل التبديل (AR)



  
(EN) Automatic adjustment of force - (NL) Automatische krachtregeling - (EL) Αυτόματη ρύθμιση της δύναμης - (PL) Automatyczna regulacja siły - (RU) Автоматическая регулировка усилия - (CS) Automatické nastavení síly - (TR) Otomatik güç ayarı - (HR) Automatsko namještanje sile - (RO) Reglarea automată a forței - الضبط التلقائي للقوة (AR)

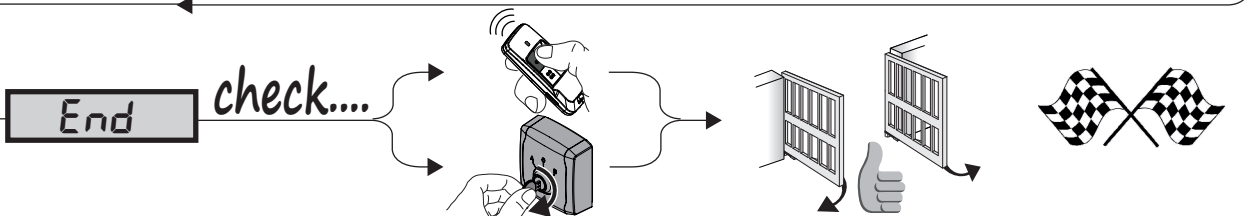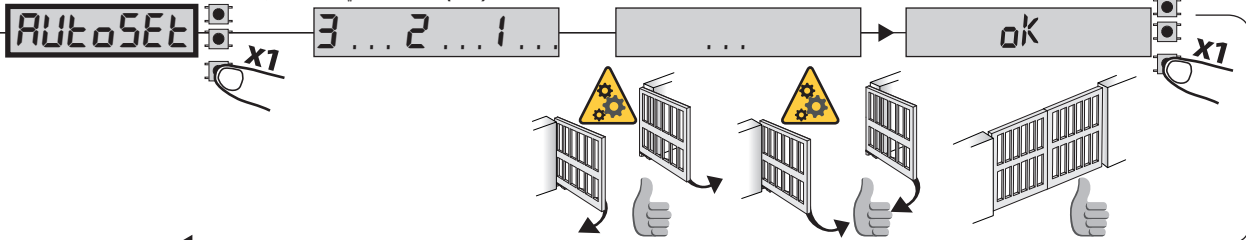

# Afficheur en français

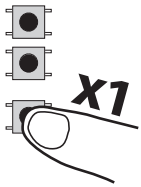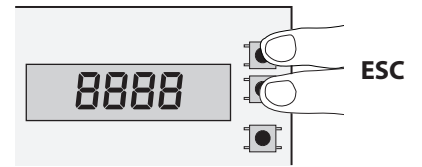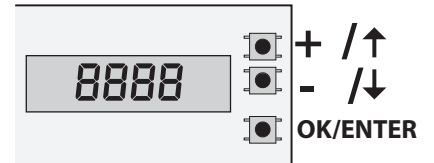   


## Langue

 


## Type de moteur



 
## Nombre de moteurs

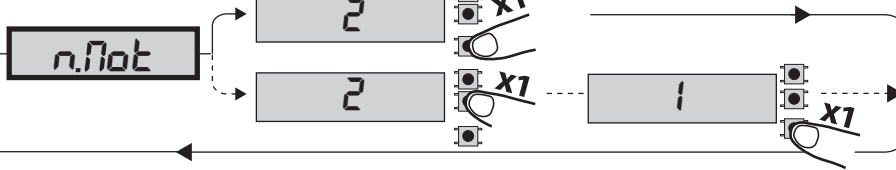

## Direction d'ouverture

 


## Personnalisation

 

## Mémorisation des télécommandes


 
Répète l'opération si d'autres télécommandes

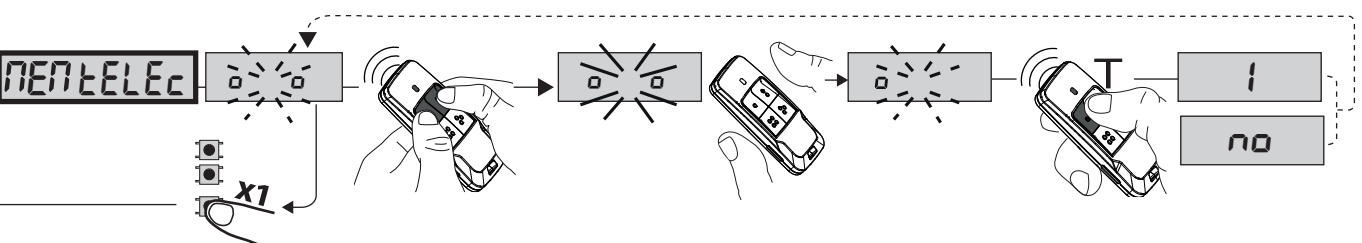

## Réglage des fins de course




  
## Réglage automatique de la force








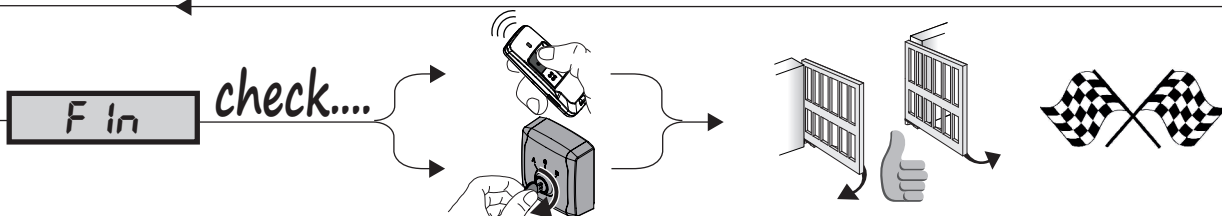
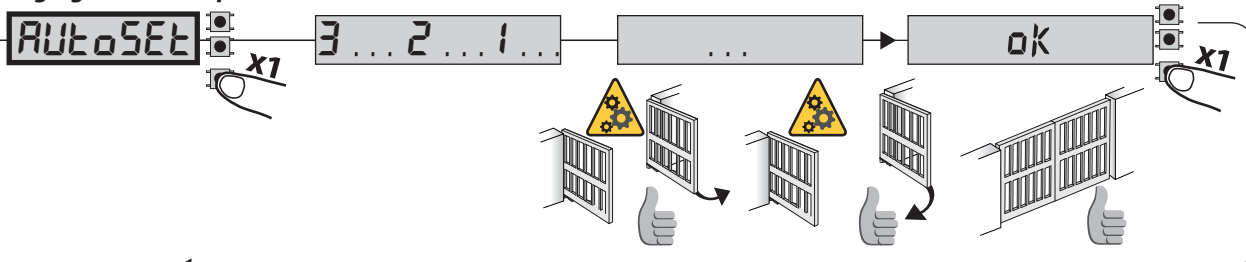



# Menú en español

  D814422.0ADA0\_02

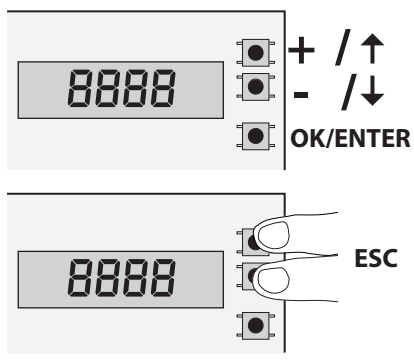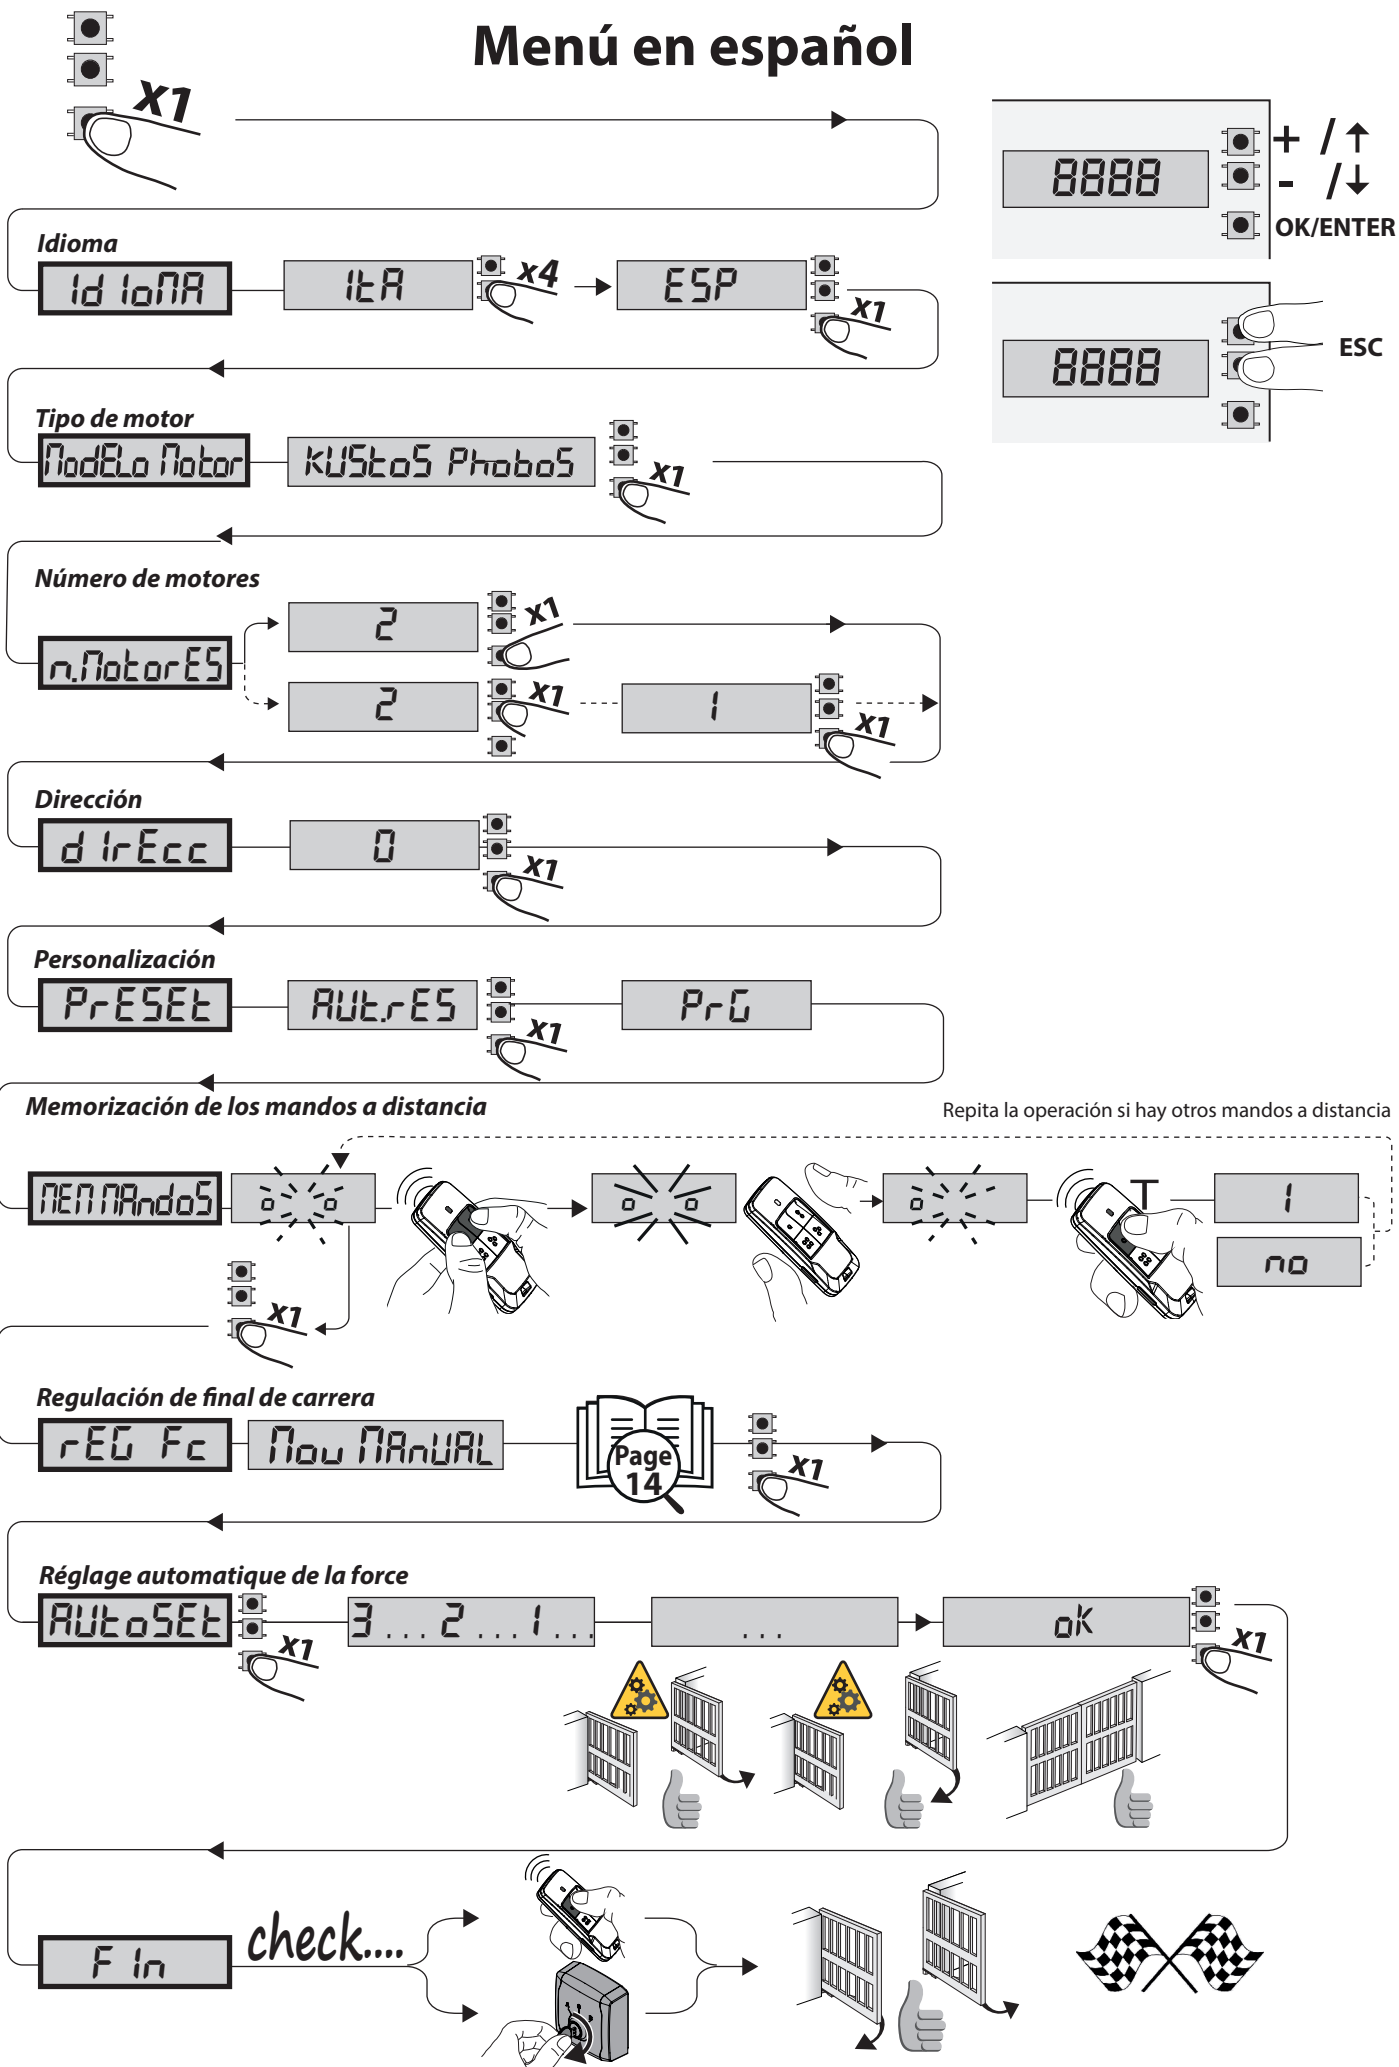



# Auswahlmenü auf Deutsch

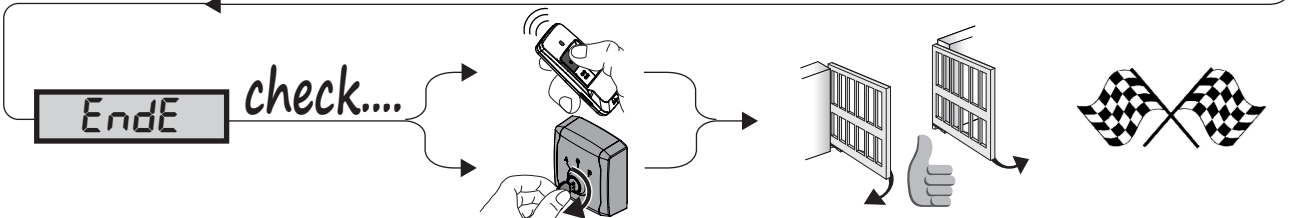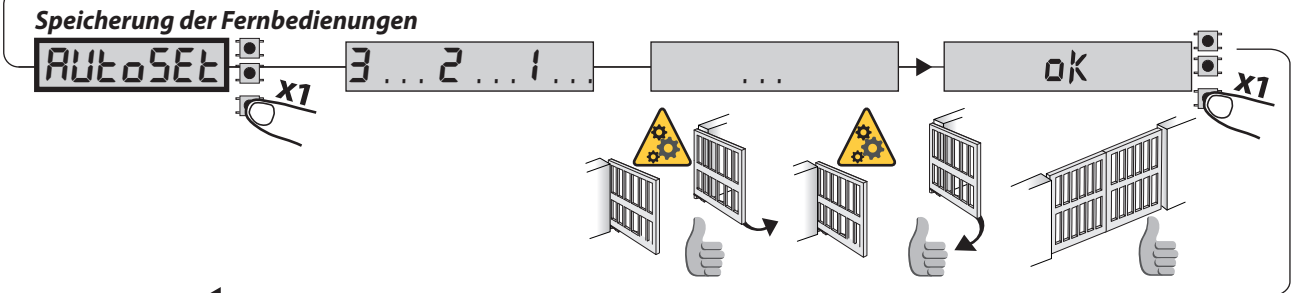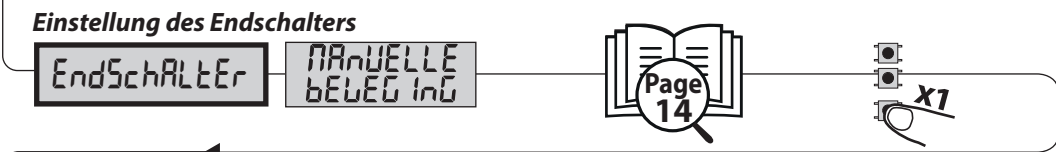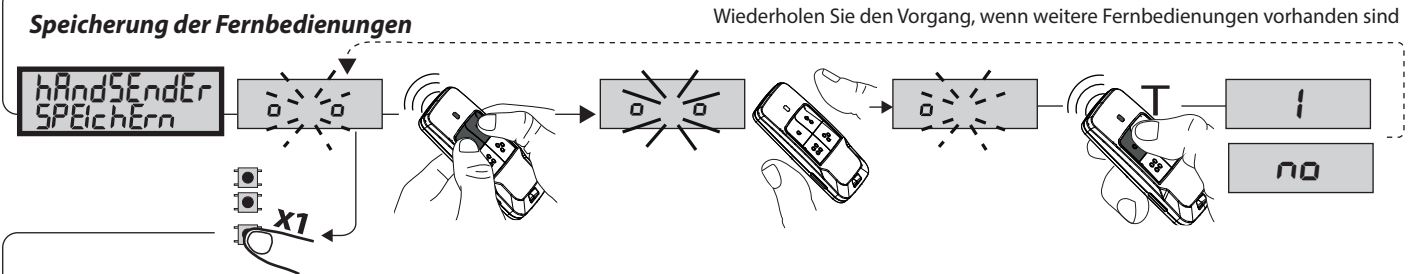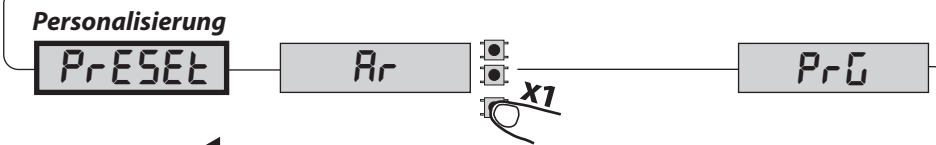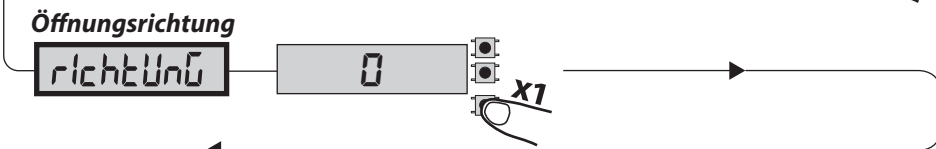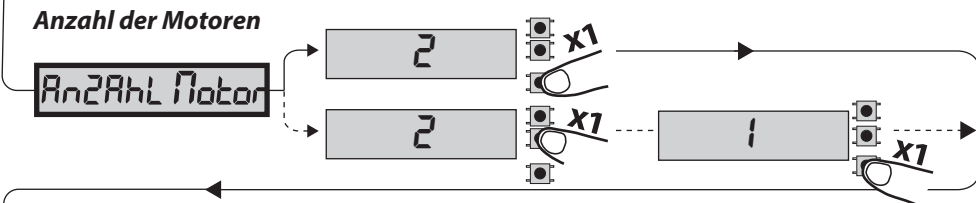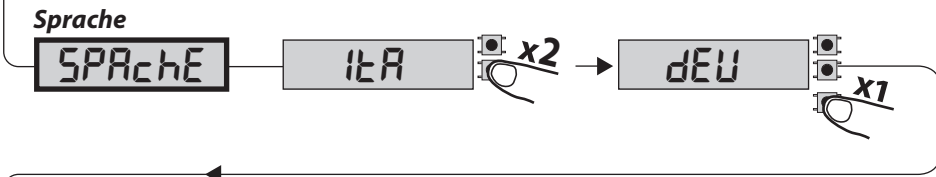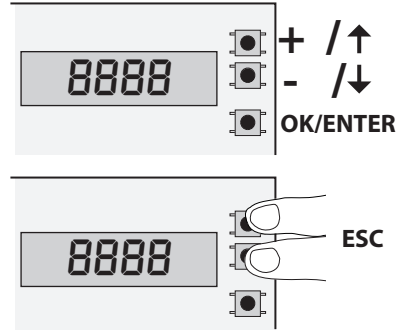         

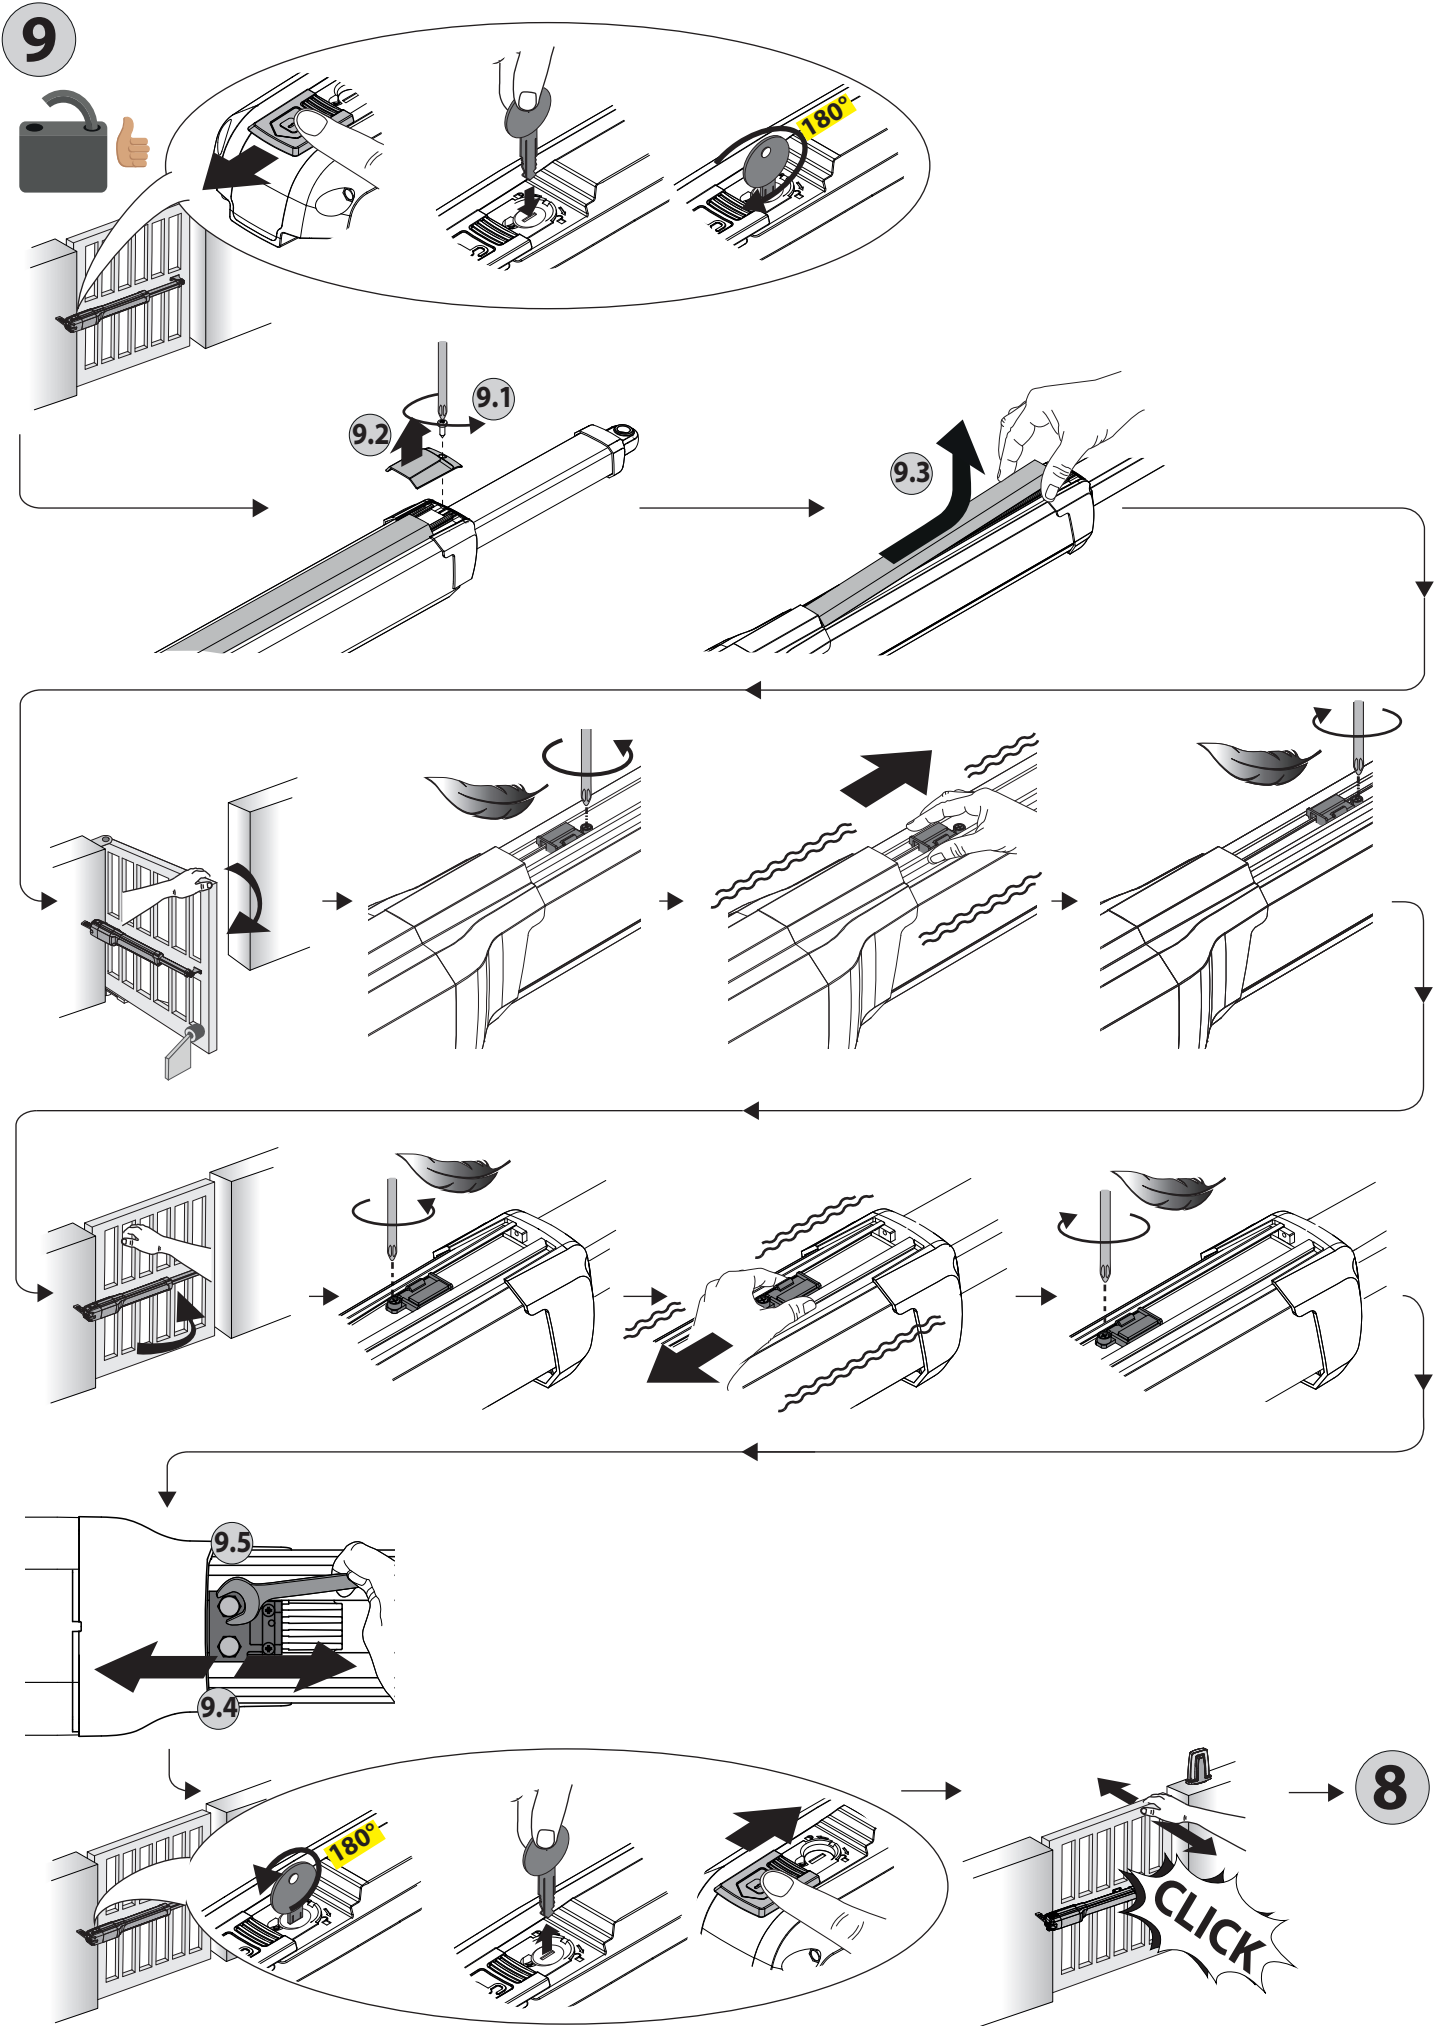 



# t c A

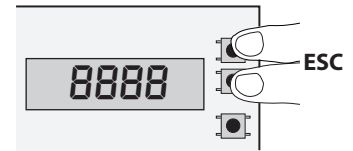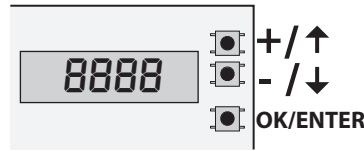  

## LEGENDA - LEGENDE - LEGEND - LEYENDA - ΥΠΟΜΝΗΜΑ - LEGANDA - ΛΕΖΑΝΤΑ - УСЛОВНЫЕ ОБОЗНАЧЕНИЯ - VYSVĚTLIVKY - ANLAMLAR - LEGENDÄ - أسطورة



(IT)Premere 4 volte rapidamente sul tasto OK - (EN) Press the OK button 4 times in quick succession - (FR)Appuyer 4 fois rapidement sur la touche OK  
(ES)Pulse rápidamente el botón OK 4 veces - (DE)Drücken Sie 4 Mal schnell die Taste OK - (NL)Druk 4 keer snel op de knop OK  
(PT)Premir rapidamente no botão OK 4 vezes - (EL)Πατήστε γρήγορα το κουμπί OK 4 φορές - (PL)Naciśnij szybko przycisk OK 4 razy (RU)Быстро нажмите кнопку OK 4 раза - (CS)Stiskněte tlačítko OK 4krát v rychlém sledu - (TR)4 kez hızlı bir şekilde OK düğmesine basın  
(HR)Tipku OK redu brzo pritisnite 4 puta zaredom.-(RO) Apăsați butonul OK de 4 ori în succesiune rapidă - اضغظ على زر موافق 4 مرات في تعاقب سريع (AR)

 
 


(IT)premere finché compare il parametro desiderato - (EN) press until the desired parameter appears - (FR)appuyer jusqu'à voir le paramètre désiré  
(ES)Pulse hasta que aparezca el parámetro deseado - (DE)drücken, bis der gewünschte Parameter erscheint - (NL)druk tot de gewenste parameter verschijnt  
(PT)premir até encontrar o parâmetro desejado - (EL)πατήστε μέχρι να εμφανιστεί η επιθυμητή παράμετρος  
(PL)naciskaj do momentu pojawienia się żadanego parametru - (RU)удерживайте до появления желаемого параметра  
(CS)tiskněte, dokud se nezobrazí požadovaný parametr - (TR)istenen parametre görülene kadar basın -(HR) pritišćite sve dok se ne pojavi željeni parametar - (RO) apăsați până când apare parametrul dorit - اضغظ حتى تظهر المعلمة المطلوبة (AR)


PrG

(IT)Programmazione - (EN) Programming - (FR)Sauvegarde en cours - (ES)Copia de seguridad en curso - (DE)Backup läuft - (NL)back-up wordt uitgevoerd  
(PT) backup em curso - (EL)δημιουργία αντιγράφων ασφαλείας σε εξέλιξη - (PL)wykonywanie kopii zapasowej w toku - (RU)выполняется резервное копирование - (CS)probíhá zálohování - (TR)yedekleme devam ediyor - (HR) Programiranje - (RO) Programarea - برمجة (AR)


IT	Voglio impostare il tempo di chiusura automatica	DE	Ich möchte die Zeit für die automatische Schließung einstellen	PL	Chcę ustawić czas automatycznego zamknięcia	RO	Ţelam namjestiti vrijeme zatvaranja.
EN	I want to set the automatic closing time	NL	Ik wil de automatische sluitingstijd instellen	RU	Хочу установить время автоматического закрытия	HR	Doresc să setez ora de închiderea automată
FR	Je veux régler le temps de fermeture automatique	PT	Desejo configurar o tempo de fecho automático	CS	Chci nastavit čas automatického zavírání	AR	أريد ضبط وقت الإغلاق التلقائي
ES	Se desea configurar el tiempo de cierre automático.	EL	Θέλω να ρυθμίσω τον χρόνο αυτόματου κλεισίματος	TR	Otomatik kapanma süresini ayarlamak istiyorum		

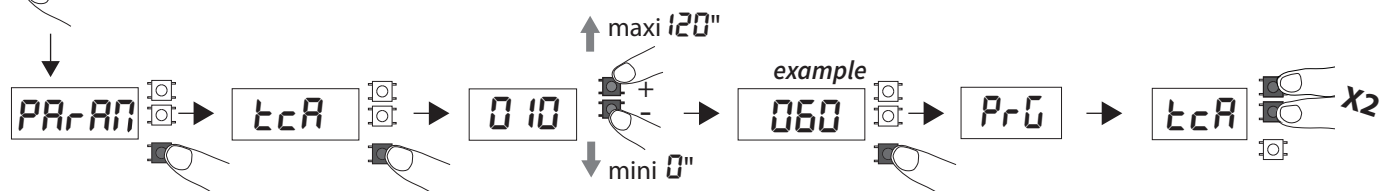

IT	Voglio disattivare la chiusura automatica	DE	Ich möchte das automatische Schließen deaktivieren	PL	Chcę dezaktywować automatyczne zamykanie	RO	Ţelam deactivirati automatisko zatvaranje.
EN	I want to deactivate automatic closing	NL	Ik wil automatischvergrendelen deactiveren	RU	Хочу деактивировать автоматическое закрытие	HR	Doresc să dezactivez închiderea automată
FR	Je veux désactiver la fermeture automatique	PT	Desejo desativar o fecho automático	CS	Chci deaktivovat automatické zavírání	AR	أريد إلغاء تنشيط الإغلاق التلقائي
ES	Se desea desactivar el cierre automático	EL	Θέλω να απενεργοποιήσω το αυτόματο κλείσιμο	TR	Otomatik kapanmayı devre dışı bırakmak istiyorum		

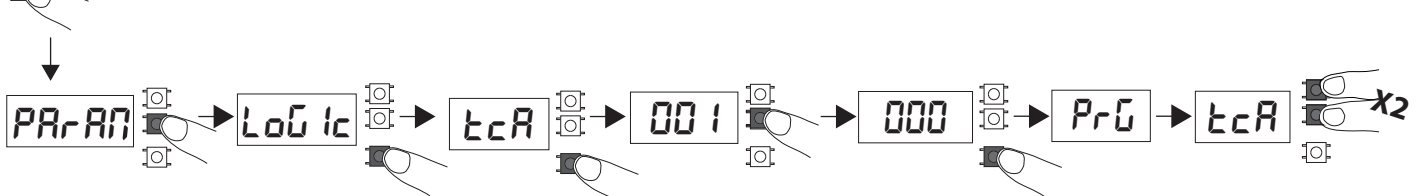 


11

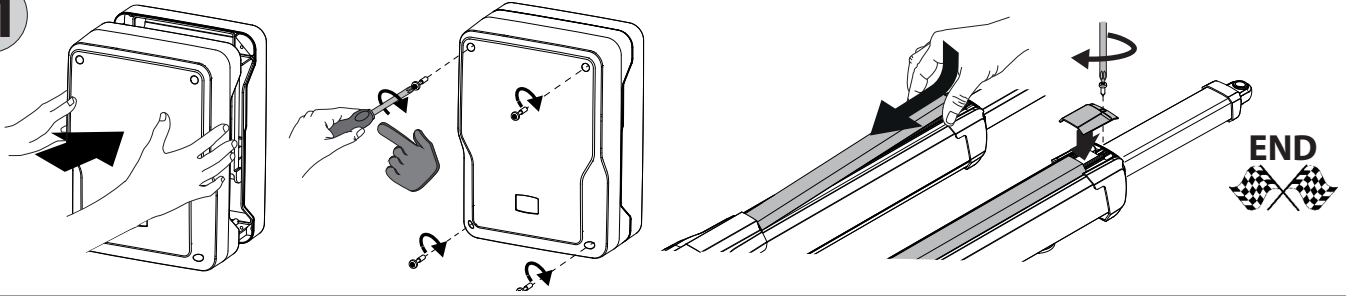 


12

**KUSTOS BT B 25**

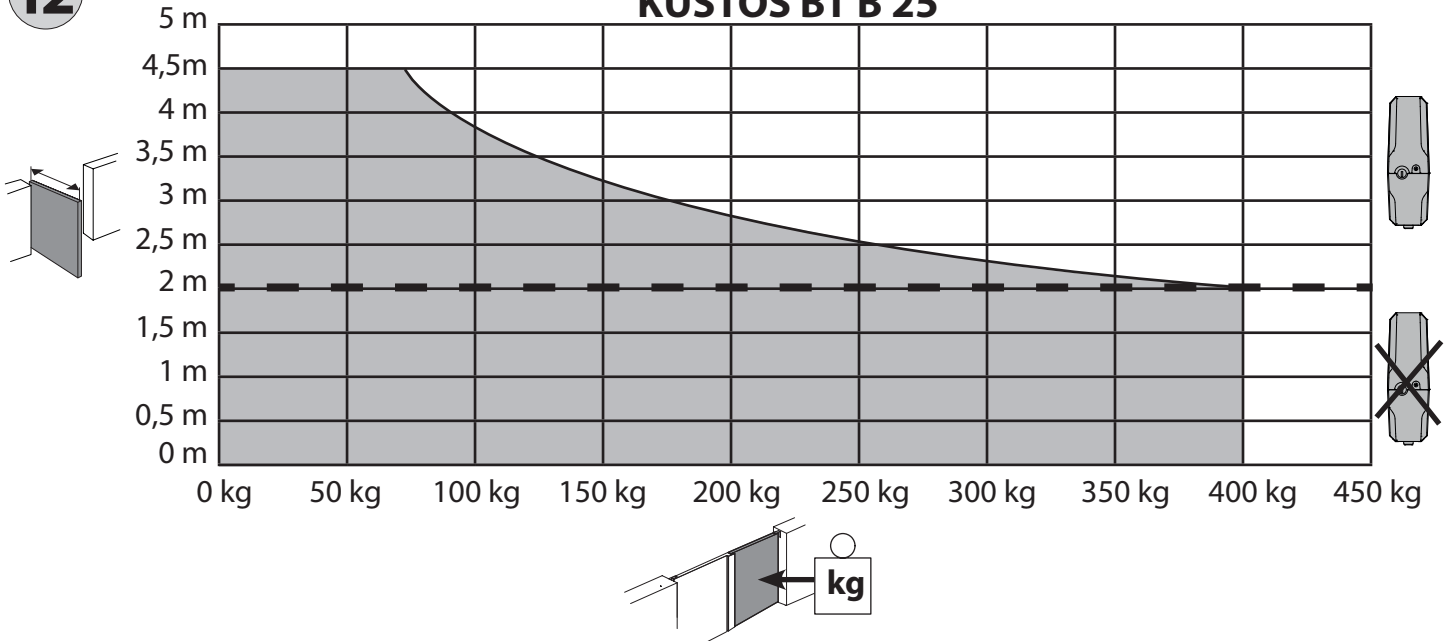 

**KUSTOS BT B 40**

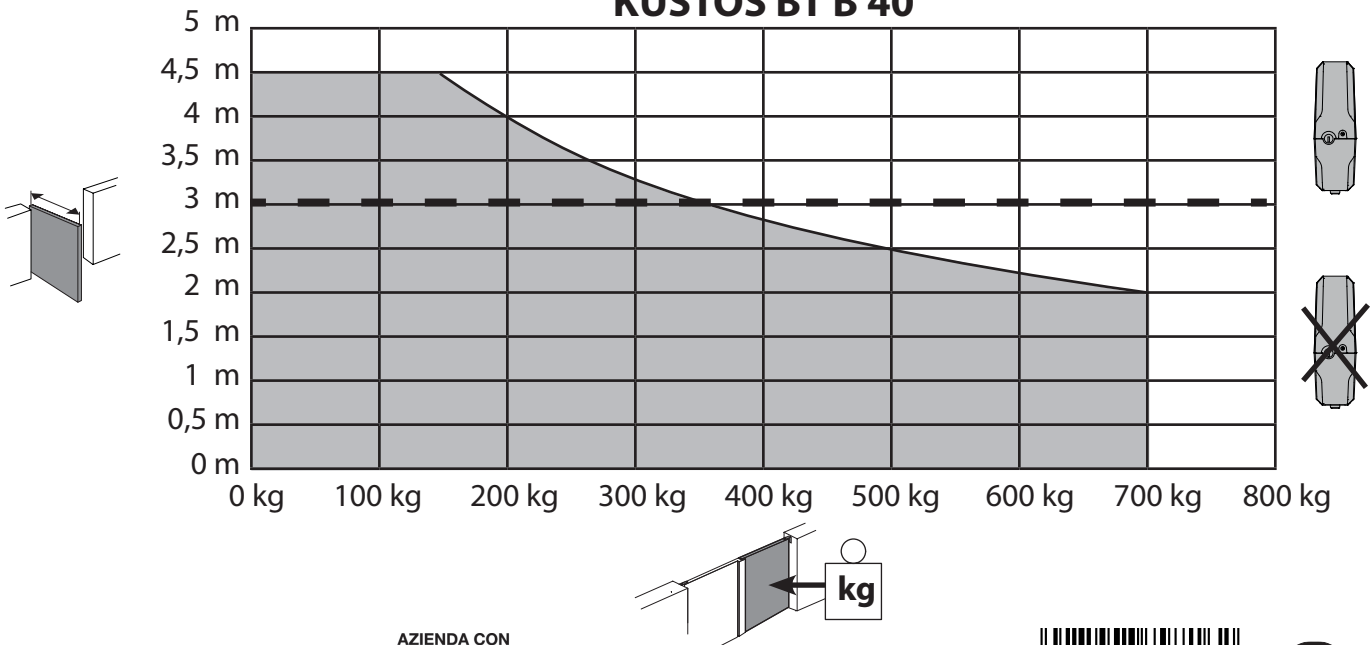 

AZIENDA CON  
SISTEMA DI GESTIONE  
CERTIFICATO DA DNV GL  
= ISO 9001 =  
= ISO 14001 =



**BFT**

[www.bft-automation.com](http://www.bft-automation.com)

**BFT Spa**

Via Lago di Vico, 44 ITALY  
36015 Schio (VI)  
T +39 0445 69 65 11  
F +39 0445 69 65 22

**SPAIN**  
BFT GROUP ITALIBERICA DE  
AUTOMATISMOS SL  
Camí de Can Bassa, 6, 08401  
Granollers, Barcelona, Spagna

**FRANCE**  
AUTOMATISMES BFT FRANCE SAS  
50 rue Jean Zay  
69800 Saint-Priest, Francia

**GERMANY**  
BFT ANTRIEBSSYSTEME GMBH  
Faber-Castell-Straße 29, 90522  
Oberasbach, Germania

**UNITED KINGDOM**  
BFT AUTOMATION UK LTD  
Unit C2-C3 The Embankment Business  
Park, Vale Road Heaton Mersey Stockport  
Cheshire SK4 3GL United Kingdom

**BFT AUTOMATION (SOUTH) LTD**  
Enterprise House Murdock Road, Dorcan,  
Swindon, England, SN3 5HY

**PORTUGAL**  
BFT PORTUGAL SA  
Urb. Pedrulha lote 9 - Apartado 8123,  
3025-248 Coimbra Portugal

**POLAND**  
BFT POLSKA SP ZOO  
Marecka 49, 05-220 Zielonka, Polonia

**IRELAND**  
BFT AUTOMATION IRELAND  
Unit D3 City Link Business Park, Old Naas  
Road, Dublin

**CROATIA**  
BFT ADRIA DOO  
Obrovac 39, 51218, Dražice, Croazia

**CZECH REPUBLIC**  
BFT CZ SRO  
Ustecka 533/9, 184 00 Praha 8,  
Czech

**TURKEY**  
BFT OTOMASYON KAPI  
Şerifali Mahallesi, no, 34775  
Ümraniye/İstanbul, Turchia

**U.S.A.**  
BFT AMERICAS INC.  
1200 S.W. 35th Avenue Suite B Boynton  
Beach FL 33426

**AUSTRALIA**  
BFT AUTOMATION AUSTRALIA PTY  
29 Bentley St, Wetherill Park NSW  
2164, Australia

**EMIRATES**  
BFT MIDDLEEAST FZCO  
FZS2 AA01 -PO BOX 262200, Jebel Ali Free  
Zone South Zone 2, Dubai - United Arab

**NEW ZEALAND**  
BFT AUTOMATION NEW ZEALAND  
224/A Bush Road, Rosedale,  
Auckland, New Zealand